



Building preparation

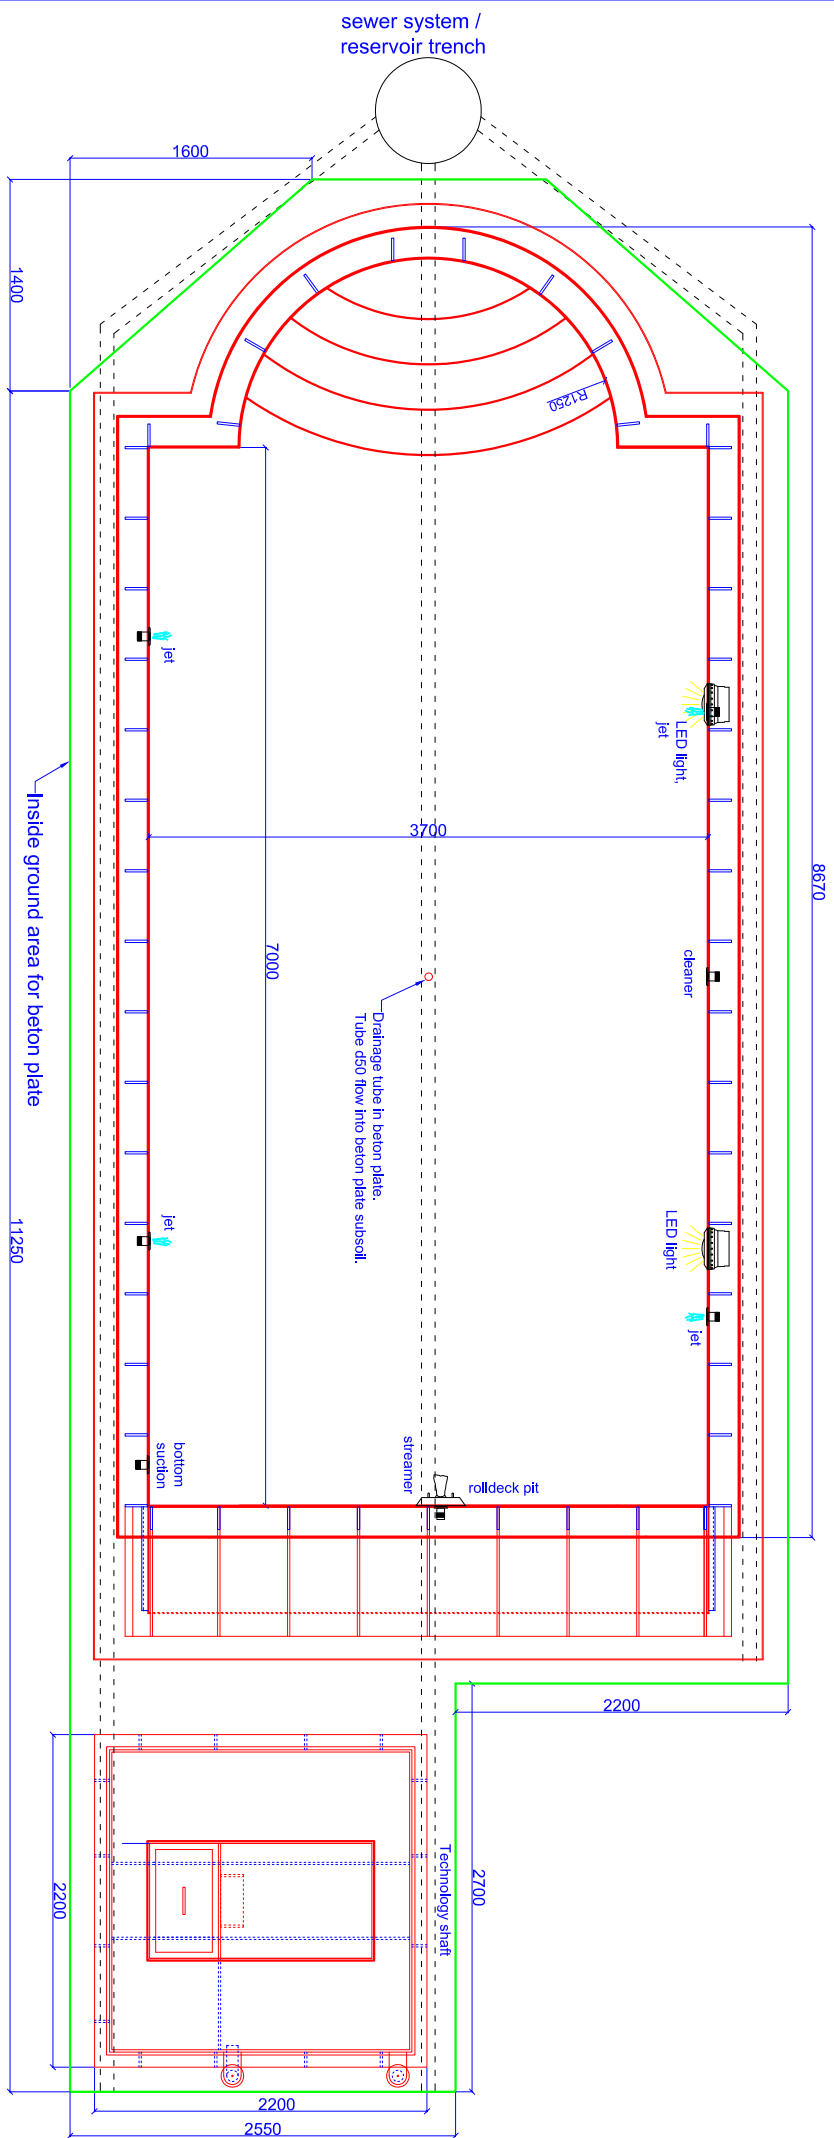

Sample cut-PP pool overflow

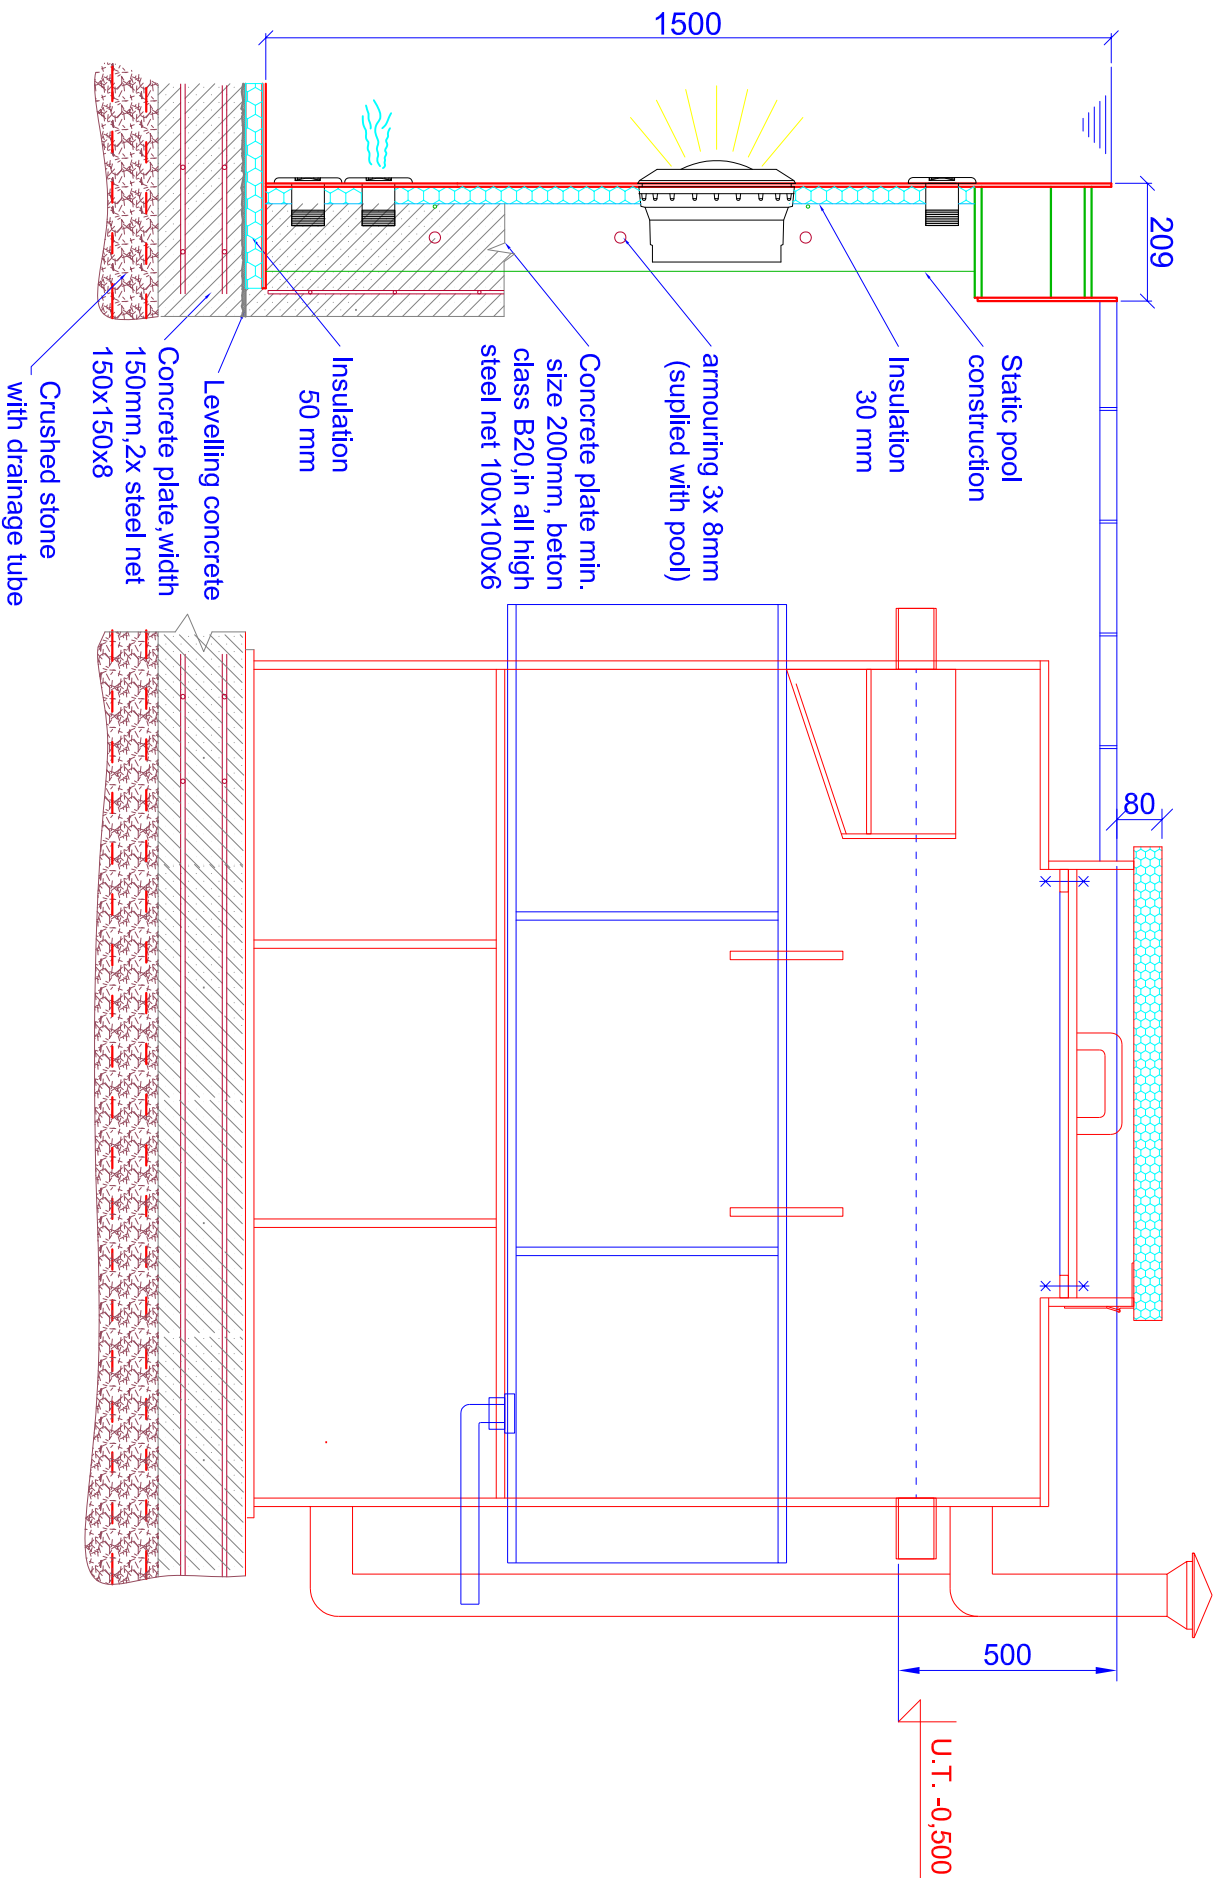

Cut-roldeck pit

